


1.2.2.3 Control Panel

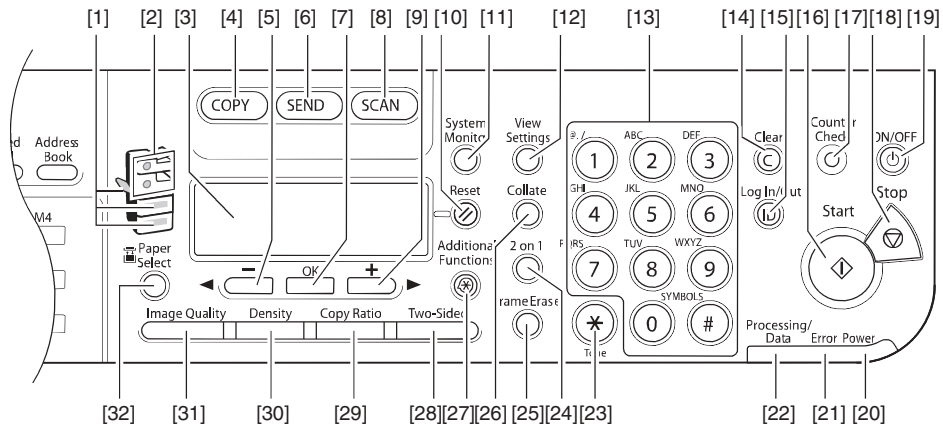

F-1-10

- |                              |   |
|------------------------------|---|
| [1] Paper Select indicator   | [17] [Counter Check] button                         |
| [2] Jam Location indicator   | [18] [Stop] button                                  |
| [3] LCD display              | [19] [ON/OFF] button (operation panel power switch) |
| [4] [COPY] button            | [20] [Power] indicator                              |
| [5] [</>] button             | [21] [Error] indicator                              |
| [6] [SEND] button            | [22] [Processing/Data] indicator                    |
| [7] [OK] button              | [23] [Tone] button                                  |
| [8] [SCAN] button            | [24] [2 on 1] button                                |
| [9] [>/+] button             | [25] [Frame Erase] button                           |
| [10] [Reset] button          | [26] [Collate] button                               |
| [11] [System Monitor] button | [27] [Additional Functions] button                  |
| [12] [View Settings] button  | [28] [Two-Sided] button                             |
| [13] Numeric buttons         | [29] [Copy Ratio] button                            |
| [14] [Clear] button          | [30] [Density] button                               |
| [15] [log In/Out key] button | [31] [Image Quality] button                         |
| [16] [Start] button          | [32] [Paper Select] button                          |