


Description of Control Panel

Control Panel

NOTE:

A major control panel is used to describe function below as several types of panels are equipped by specifications and countries.

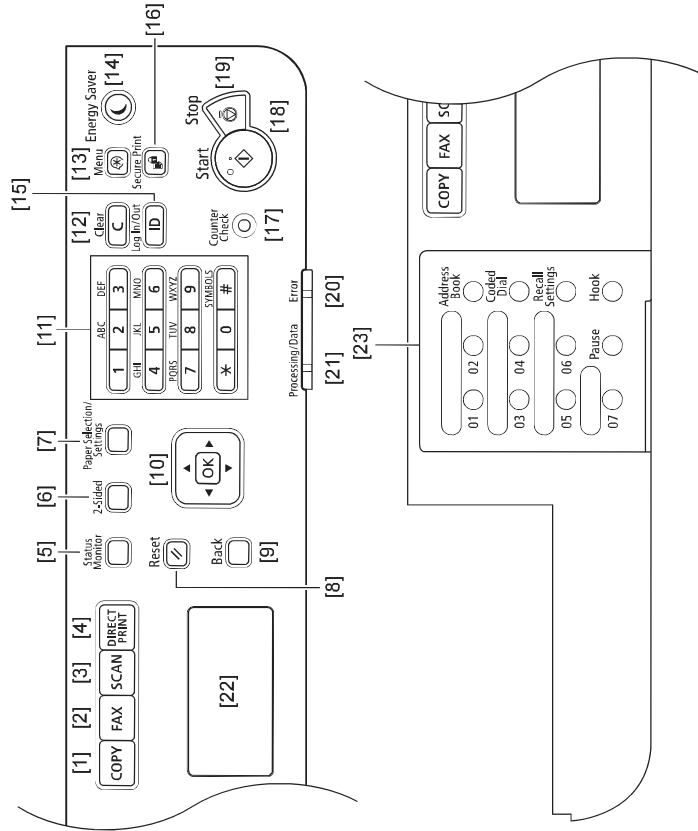

F-1-12

No.	Name	Function
[6]	[2-Sided] Key	Press to set 2-sided copies.
[7]	[Paper Selection/Settings] Key	Press to select a paper source, such as a drawer or multi-purpose tray, and register paper size and type.
[8]	[Reset] Key	Press to reset the settings.
[9]	[Back] Key	Press to return to the previous screen.
[10]	[▲] Key	Press to scroll up or to increase the value.
	[▼] Key	Press to scroll down or to decrease the value.
	[◀] Key	Press to return to the previous screen, or move the cursor to the left.
	[▶] Key	Press to proceed to the next screen, or move the cursor to the right.
	[OK] Key	Press to confirm an action or setting.
[11]	Numeric Keys [0] - [9] Keys	Press to enter characters and numbers.
	[*] Key	Press to use tone dialing such as when receiving fax information services.
	[#] Key	Press to enter symbols.
[12]	[Clear] Key	Press to delete entered characters and numbers.
[13]	[Menu] Key	Press to specify or register various settings.
[14]	[Energy Saver] Key	Press to manually set or cancel the Sleep mode.
[15]	[ID] Key	When a logon screen is displayed, press the key after entering your logon information such as an ID and PIN.
[16]	[Secure Print] Key	Press when you start printing secured documents.
[17]	[Counter Check] Key	Press to view the counter values as well as the list of the equipment that is attached or enabled.
[18]	[Start] Key	Press to start a job.
[19]	[Stop] Key	Press to cancel jobs.
[20]	[Error] Indicator	Flashes when an error occurs.
[21]	[Processing/ Data] Indicator	Flashes when the device is in operation, is on when there is a job waiting to be processed.
[22]	Display (LCD)	During normal operation, displays messages and prompts. When adjusting the settings, displays your selections, text, and numbers.
[23]	[One-touch] Key	Press to quickly specify a destination for sending documents.
	[Address Book] Key	Press to display a list of destinations registered in the Address Book, or to register or edit destinations in the Address Book.
	[Coded Dial] Key	Press to use coded dial numbers.
	[Recall Settings] Key	Press to recall previously used destinations with settings specified for sending documents.
	[Hook] Key	Press to dial without lifting up the handset of the external telephone, such as when receiving fax information services.
	[Pause] Key	Press to insert pauses in the fax number.

T-1-8