


Operation

- Power Switch
- Types of Power Switches

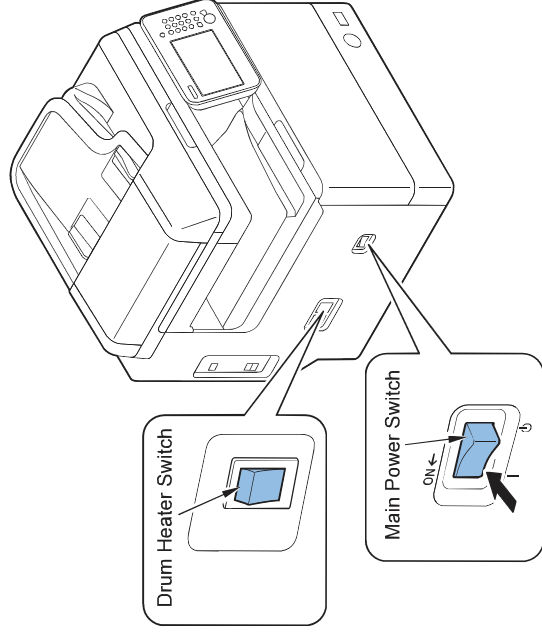

F-1-13

This machine has the Main Power Switch and the Drum Heater Switch.

[1] Main Power Switch

This switch is used to turn OFF / ON the power of host machine.

[2] Drum Heater Switch (option)


This switch is used to turn OFF / ON the power of the drum heater.

● Points to Note on Turning ON/OFF the Power Switch

- Be sure to turn OFF the main power switch when turning OFF the power. (The conventional shut-down sequence process is not needed.)
- After turning OFF the power (after turning OFF the Main Power Switch), do not turn ON the main power switch again unless the screen disappears.
- Do not turn OFF the power during downloading.

■ Description of Control Panel

● Control Panel

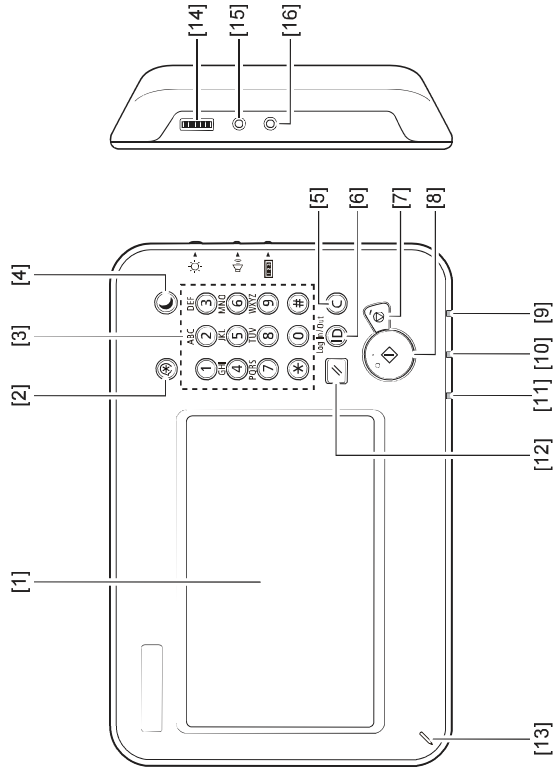

F-1-14

- | | | | |
|-----|---------------------------|------|-----------------------------|
| [1] | Touch Panel Display | [9] | Main Power Indicator |
| [2] | Settings/Registration key | [10] | Error Indicator |
| [3] | Numeric key | [11] | Processing / Data Indicator |
| [4] | Energy Saver key | [12] | Reset key |
| [5] | Clear key | [13] | Edit Pen |
| [6] | ID (Log In/Out) key | [14] | Brightness Adjustment Dial |
| [7] | Stop key | [15] | Volume Settings key |
| [8] | Start key | [16] | Counter Check key |