

Operation

Power Switch

Types of Power Switches


This machine has the Main Power Switch, the Control Panel Power Switch and the Environment Heater Switch. Turning ON the Main Power Switch supplies the power in the usual case (except when the machine is in sleep mode). The Environment Switch supplies or blocks the power to the Drum Heater, the Cassette Heater and the Reader Heater.

Points to Note on Turning ON/OFF the Power Switch

- Do not turn OFF the Main Power Switch while the progress bar (to be displayed when the power is turned ON) is displayed, which indicates access to the HDD.
- Be sure to turn OFF the Main Power Switch to cut the power (there is no need to perform the shutdown sequence which has been performed with the conventional machines).
- After turning OFF the power (after turning OFF the Main Power Switch), do not turn ON the Main Power Switch unless the screen disappears.
- Do not turn OFF the power during downloading.

Control Panel

Control Panel

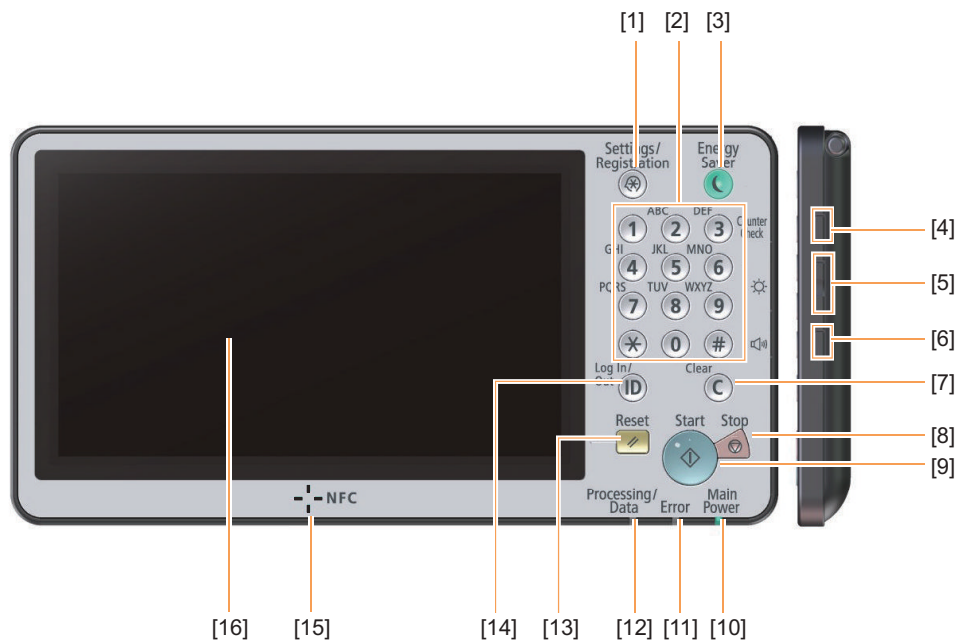

No.	Name	No.	Name
[1]	[Settings/Registration] key	[9]	[Start] key
[2]	Numeric keys	[10]	Main Power indicator
[3]	[Energy Saver] key	[11]	Error indicator
[4]	[Counter/Device Information] key	[12]	Processing/Data indicator
[5]	Brightness Adjustment key	[13]	[Reset] key
[6]	Settings key	[14]	ID (Log In/Out) key
[7]	[Clear] key	[15]	NFC (If equipped with NFC Kit-B1)
[8]	[Stop] key	[16]	Touch panel display