


Control Panel

Control Panel + Numeric Keypad (Option)

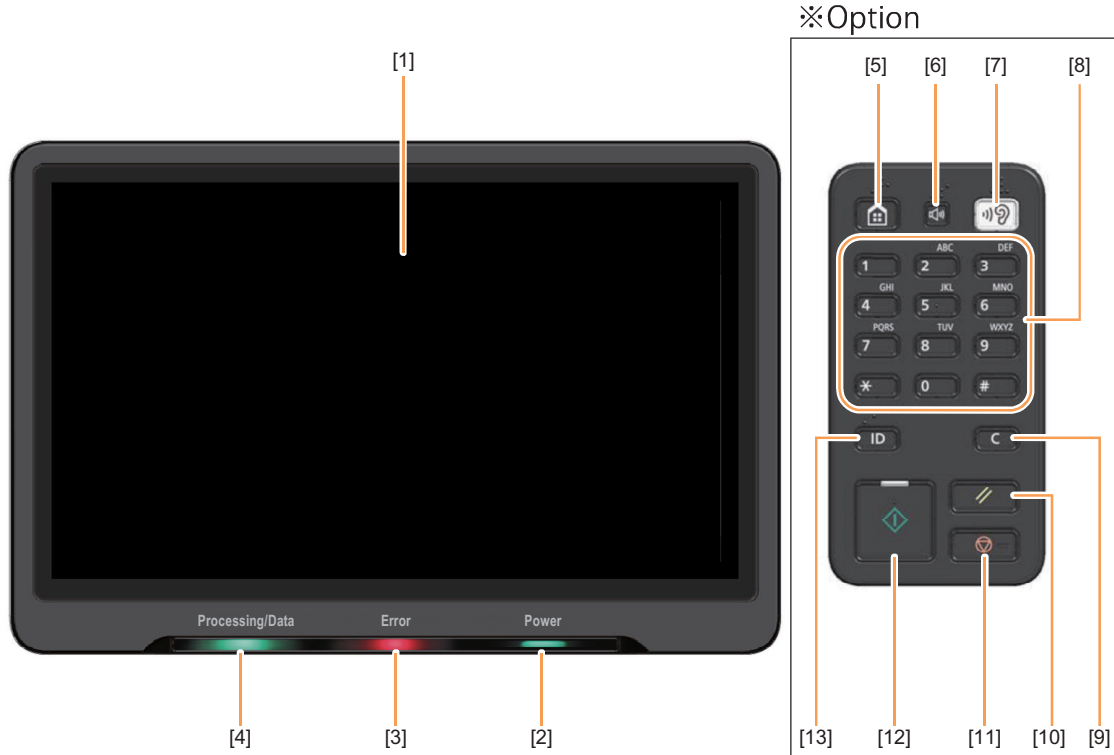

NOTE:

The Numeric Keypad at the right side of above figure is optional.

No.	Name
[1]	Touch Panel Display
[2]	Main Power LED
[3]	Error LED
[4]	Memory LED
[5]	[Home] key
[6]	[Volume Adjustment] key
[7]	[Voice Guide Mode] key
[8]	Numeric key
[9]	[Clear] key
[10]	[Reset] key
[11]	[Stop] key
[12]	[Start] key
[13]	[Authentication] key