


Control Panel


Control Panel

imageRUNNER ADVANCE C9xxx

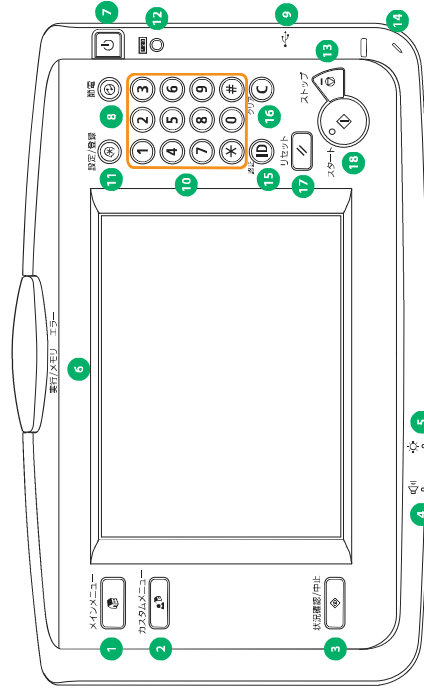

F-1-19


imageRUNNER ADVANCE C7xxx

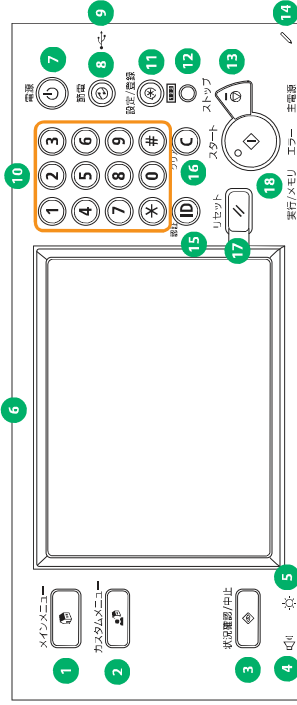

F-1-20

- | | |
|---------------------------------------|--------------------------------|
| [1] Main Menu Key | [10] Keypad |
| [2] Custom Menu Key | [11] Settings/Registration Key |
| [3] Status Check/Stop Key | [12] Counter Check Key |
| [4] FAX Volume Adjustment Key | [13] Stop Key |
| [5] Screen Brightness Adjustment Dial | [14] Operation Pen |
| [6] Touch Panel Display | [15] ID (authentication) Key |
| [7] Control Panel Power Switch | [16] Clear Key |
| [8] Energy Saver Key | [17] Reset Key |
| [9] USB Insertion Slot | [18] Start Key |

Main Menu

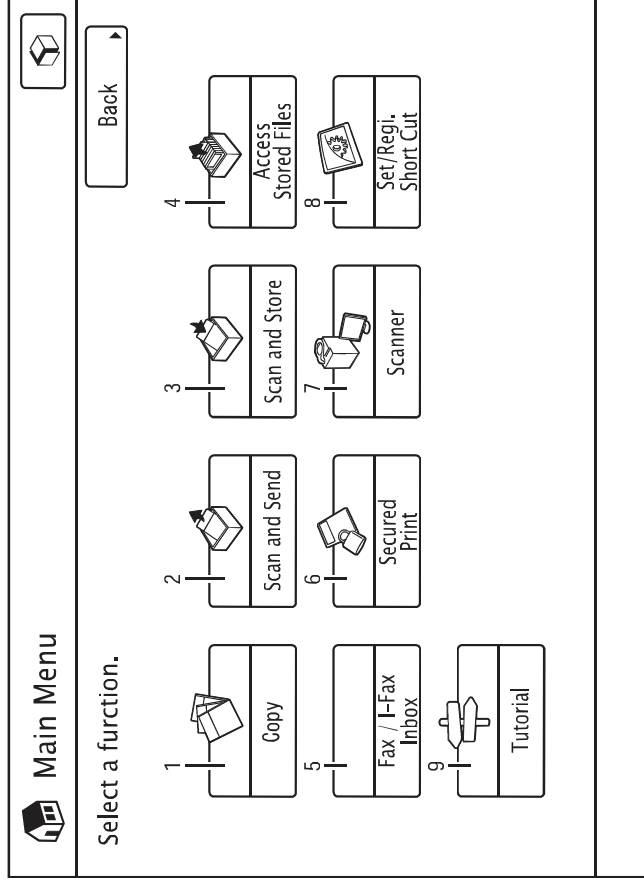

F-1-21

- | |
|-------------------------|
| [1] Copy |
| [2] Scan and Send |
| [3] Scan and Store |
| [4] Access Stored Files |
| [5] Fax/I-Fax Inbox |
| [6] Secured Print |
| [7] Scanner |
| [8] Set/Regi. Short Cut |
| [9] Tutorial |