


Control Panel

Control Panel


imageRUNNER ADVANCE C9200 Series

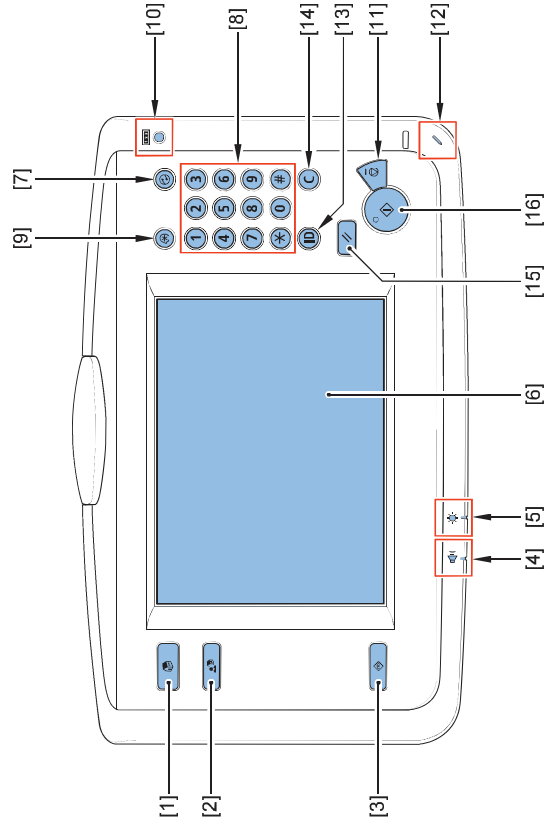

F-1-19

- [1] Main Menu Key
- [2] Custom Menu Key
- [3] Status Check/Stop Key
- [4] FAX Volume Adjustment Key
- [5] Screen Brightness Adjustment Dial
- [6] Touch Panel Display
- [7] Energy Saver Key
- [8] Keypad
- [9] Settings/Registration Key
- [10] Counter Check Key
- [11] Stop Key
- [12] Operation Pen
- [13] ID (authentication) Key
- [14] Clear Key
- [15] Reset Key
- [16] Start Key

imageRUNNER ADVANCE C7200 Series

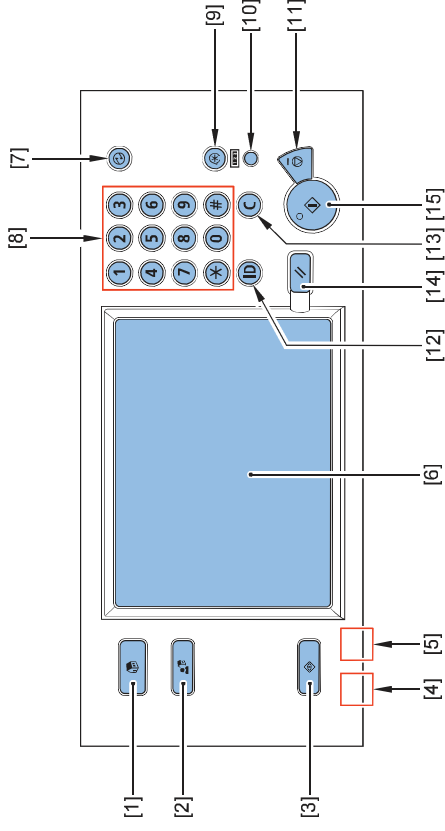

F-1-20

- [1] Main Menu Key
- [2] Custom Menu Key
- [3] Status Check/Stop Key
- [4] FAX Volume Adjustment Key
- [5] Screen Brightness Adjustment Dial
- [6] Touch Panel Display
- [7] Energy Saver Key
- [8] Keypad
- [9] Settings/Registration Key
- [10] Counter Check Key
- [11] Stop Key
- [12] ID (authentication) Key
- [13] Clear Key
- [14] Reset Key
- [15] Start Key